Equipment Maintenance Guide

Page 1: Pressure inspection rule


If outlet pressure exceeds 80 psi:

1. Stop the pump.
2. Isolate electrical power.
3. Inspect the inlet filter.

This document is fictional and for testing only.

Page 2: Flow diagram

Flow direction: left to right

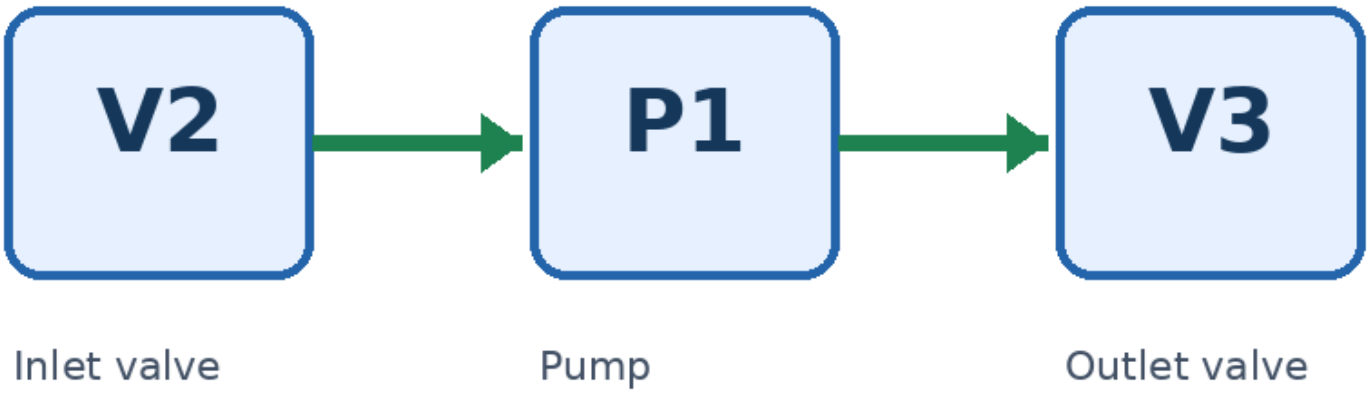

Question: Which valve is immediately upstream of the pump?

Page 3: Pump temperature chart

Temperature in degrees C by elapsed minutes

